
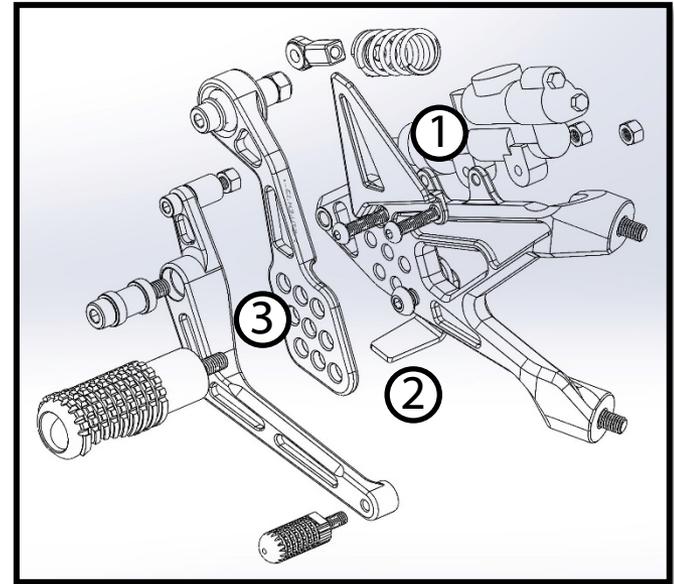


evol technology rearsets for the BMW K67.

right side installation notes.



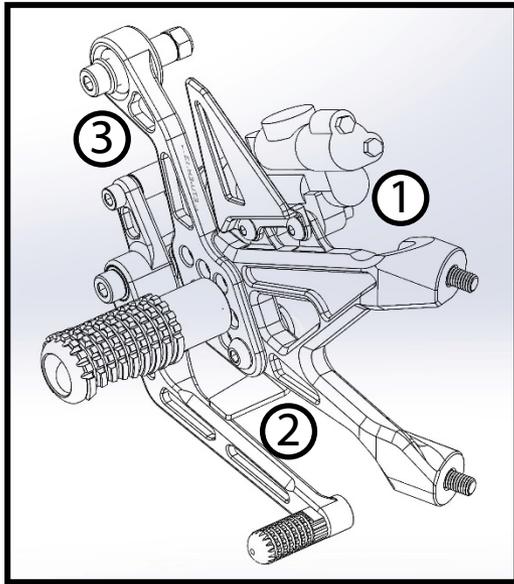


- ① Note the order of the master cylinder mounting assembly:
 1. Screw heel guard onto footpeg bracket.
 2. Install master cylinder *from the back side* onto screws protruding through bracket.
 3. Fasten master cylinder in place with locknuts provided.

- ② Adjust brake lever stop as needed to yield desired height. Return spring provided will hold lever against stop once adjusted properly.
- ③ Exhaust mount is optional. Note its placement between the footpeg and footpeg bracket. When used, an additional M8 button head screw, or the brake stop fastener, pass through the bracket to prevent its rotation.

evol technology rearsets for the BMW K67.

left side installation notes.

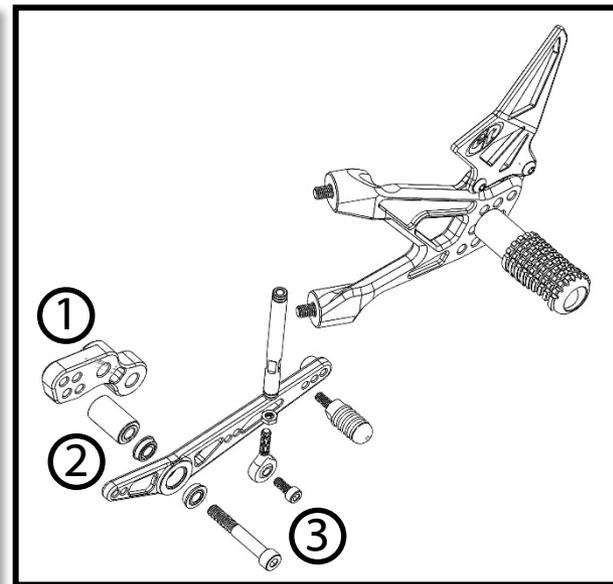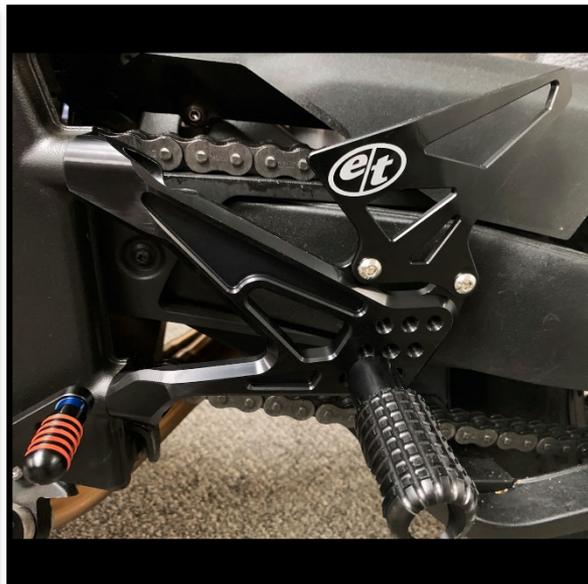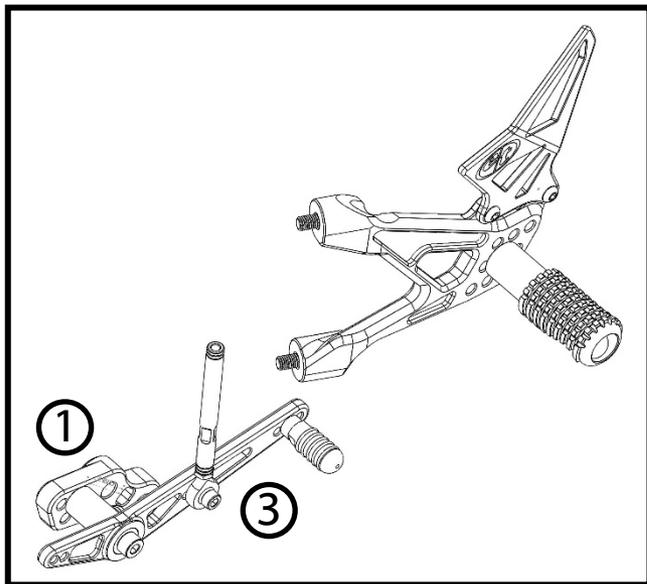

① The “kickstand delete” bracket is optional. Rearsets can be used with or without the kickstand with the appropriate components from us. Contact us if you’d like to switch from one arrangement to the other.

② Make sure the stepped washer feature machined into the stainless steel shift lever standoff is facing toward the shift lever – it provides clearance for the shift lever bearing.

③ The shift rod can be mounted to one side of the pivot or the other in order to enable GP or standard shifting, with no additional parts required.

Please contact us if you would like a different shift rod length than that which shipped with your rearsets.